

Baseplate setup

This list is not exhaustive. Other camera bodies can be fitted provided they fit the 2 criteria needed:

1. The optical (lens) center to camera base dimension must be 32mm-107mm.
2. There is a flat face with threaded holes on the lens axis to fix a standard camera plate (adapter required for some cameras).

Camera make and model	Baseplate setting (mm) (height from base to lens center line)	O-Box/Matte Box height adapter rod positions to be used	O-Focus/Follow Focus fits	Additional accessories required
AJA Cion	76	A	✓	
Arri Alexa	100 +	B	✓	ARRI BPA-1 or similar
Arri Amira	75 +	A	✓	ARRI UAP-2 or similar
Black Magic Pocket Cinema Camera	33	Adapter not required	✓	
Black Magic Cinema/Production Camera	65	A	✓	
Black Magic URSA	101 +	B	✓	URSA VCT to Standard plate adapter
Canon 1DC	86	B	✓	
Canon 1DX	84	B	✓	
Canon 5D (Mk 3)	45	Adapter not required	✓	
Canon 7D	42	Adapter not required	✓	
Canon C100	75	A	✓	
Canon C300	77	A	✓	
Canon C500	77	A	✓	
Digital Bolex D16	52	Adapter not required	✓	
Nikon D800/D810	49	Adapter not required	✓	
Panasonic GH4	35	Adapter not required	✓	
Panasonic Varicam 35	60	A	✓	
Red Epic/Dragon	96	B	✓	
RED Scarlet	96	B	✓	
Sony A7S	37	Adapter not required	✓	
Sony F5 / F55	73	A	✓	
Sony F65	90	B	✓	
Sony FS 100	45	Adapter not required	✓	
Sony FS 700	54	Adapter not required	✓	
Sony FS7	78	A	✓	
Vision Research Phantom Flex	64	A	✓	
Vision Research Phantom Flex 4K	64	A	✓	

Note: This list is being constantly updated. Please visit www.ocon.com for the very latest version.

