

ARRI Gears

1	Introduction	2
2	Jogbox Menu Pages	4
2.1	System State Glyphs	4
2.2	ARRI Head Axes Page	6
2.3	Lens Motors Page	8
2.4	Play / Record Page	9
2.5	Contrast / Battery Voltage Page	11
3	System Configuration and Maintenance	12
3.1	File and System	12
3.2	System Settings Page:	13
4	Appendices	15
4.1	Prearrangement:	15
4.2	Safety features:	15
4.3	System Setup:	15
4.4	Handwheel Adapter JHC-1:	15
4.5	Jogbox JBO-1:	15

1 Introduction

ARRI Gears is a handy, easy to use and fast to setup remote control unit for the ARRI Head-2 and CLM-2 lens motors. The motion of the head and the lens motors can be recorded and played back immediately or can be saved for later playback.

ARRI Gears is basically a standard ARRI Motion system with a simplified user interface on the controlling Jogbox.

The ARRI Head can be controlled either directly with hand wheels attached to the head motors, by means of the Jogbox Handwheel Adapter or by means of an encoded fluid head. Gear ratio, maximum speed and acceleration can be set electronically. The internal encoders of the Encoded ARRI Head-2 provide simple and fast referencing methods for pan and tilt.

The CLM-2 lens motors can be controlled hard-wired either by a WHA-2 (with WZU and WFU) or by a ZMU-2 (with FIU).

For wireless control a UMC-3 can be connected.

Cameras are not directly controlled by ARRI Gears. Nevertheless, a button in the play/record menu enables to start and stop most ARRI cameras. The remote emulation of the camera's LCD menu and controlling buttons enable the check of the camera state and the remote change of speed and shutter settings (setting not possible on ARRICam ST and ARRICam LT).

Video cameras can basically not be controlled. But – with a special configuration preset – the presence and run state of a video camera with timecode output can be indicated on the Jogbox.

If appropriate for easier editing the first frame of every record/playback shot can be marked by means of a Bloop Light.

Different setup configurations (e.g. operating the Handwheel Adapter from front or back) cannot be edited because of the simplified user interface but can be loaded as predefined setup.

In case of further questions about setup or operation please have a look at the appendices or the corresponding chapter of the ARRI Motion (AM) manual.

Go through the ARRI Motion safety features (from the ARRI Motion manual) before you start operating the ARRI Gears.

Application hints:


- The mechanical gear on the ARRI Head has always to be set to 1.
- Check that all breaks on the ARRI Head are released before you switch on the CHM-1 motors.
- On the CHM-1 motors and on the Jogbox Handwheel Controller there are brake buttons which act on the corresponding hand wheel. If the system is tracking, but does not react on your hand wheels, check the state of the brake buttons.
- If you are using a UMC-3 for wireless remote control all CLM-2 motors must still be plugged into the ARRI Motion systems LCB. In the mimic list the UMC-3 will be displayed as ZMU-3. The maximum control distance is somewhat lower compared to the standard UMC-3 application when motors are controlled by the UMC-3 directly.

- Supply the AM system, the camera and your connected video equipment from the same power plug to avoid sparks due to small potential differences of different power lines.

2 Jogbox Menu Pages

On top of any Jogbox menu page there are riders which indicate the current active page and allow the selection of other pages by simply pressing the respective glyph.


The small state glyphs which indicate system wide conditions are displayed on every Jogbox menu page (except on modal message boxes).

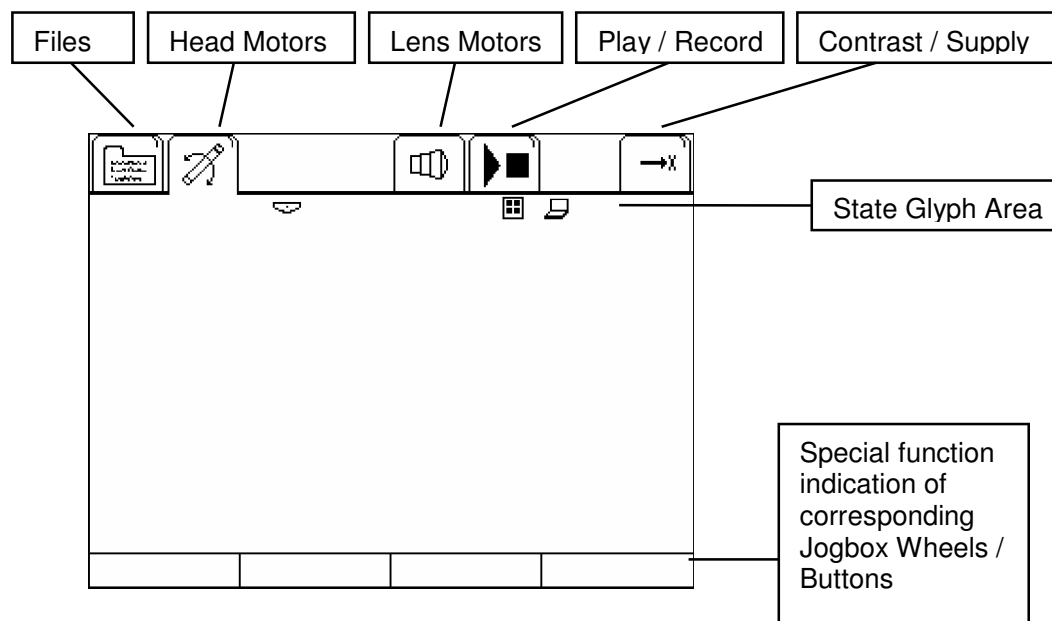



2.1 System State Glyphs

The glyphs in the State Glyph Area are blinking and non-blinking. Non-blinking glyphs are simple indications, whereas blinking glyphs (such as brake, emergency, battery) require user action before proceeding operation.









Following there is a list of the most frequent displayed glyphs in *ArriGears* mode:

 **Emergency Power Off:** This symbol indicates that the *EMERGENCY* button has been pushed. Release the red emergency button and confirm your release by pressing the power on button on the CCB once again.

 **Low Battery Warning:** This symbol will blink when the incoming voltage is too low. What the exact warning level is depends on the Battery Type which can be set up in the System Settings (*File – System – Settings* screen). The actual battery voltage level is displayed on the right most Jogbox page.


 **Encoded ARRIHEAD-2:** This symbol indicates that an Encoded ARRI Head-2 has been connected and is communicating properly with the ARRIMOTION system.

Referencing Pan and Tilt will use the Encoded ARRI Head-2 2 internal encoders.

-  **Encoded ARRIHEAD-2 Brakes:** This symbol indicates that at least one of the three ARRI Head brakes is applied. Release the brakes before you operate the head.
-  **Camera OK:** This symbol indicates that the system has detected and identified a camera, and the camera seems to be ready to run.
-  **Camera Not Ready:** This symbol indicates that the system has detected and identified a camera, and there is a problem with the camera, e.g. the camera door is open.
-  **Camera Low Bat:** The camera reports a low battery condition. The current voltage level of the camera supply is displayed on the right most *Jogbox* page.
-  **Camera Running:** Indicates that the camera is running. To indicate also the run state of video cameras (connected by time code output), the camera type *Timecode Camera* has to be loaded by means of a preconfigured setup.
-  **Camera Running:** Indicates that the camera is running and on speed (run led on camera is green).
-  **Bloop Light active:** Indicates that a *Bloop Light* is connected. The *Bloop Light* will flash on the first frame of the move automatically.
-  **Laptop Connected:** This symbol indicates that a Laptop connection – e.g. for data backup – is active.

2.2 ARRI Head Axes Page

This page allows to configure and control the ARRI Head pan and tilt axes.

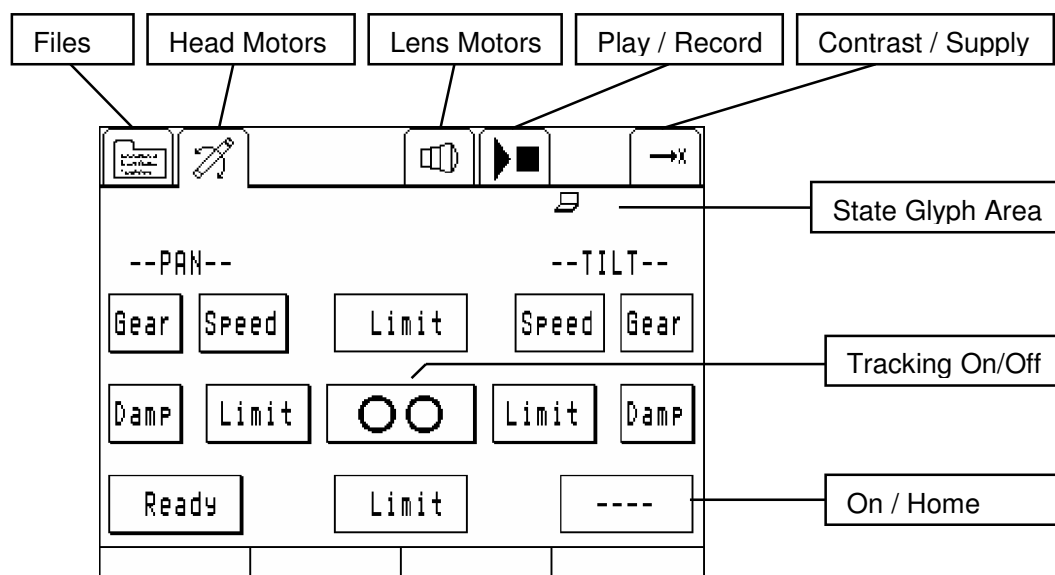

Gear: Gear ratio between controlling hand wheel and ARRI Head axis can be set in the range of 5 to 800 percent. 100% equals about 1:1 drive (mechanical gear setting has always to be set to 1).

Speed: The acceleration and speed of the respective ARRI Head axis can be set from 3 to 100 percent. Lower acceleration values result in smoother movements.

Damp: Decreases the acceleration when an axis approaches a limit or end stop. Higher values result in smoother deceleration approaching the end stop.

Limit: A press on a limit button sets the respective limit to the current position. In order to release a limit, move the respective axis to the limit (the limit button changes to a bold border) and press the limit button again.

Track: While tracking is active the motors are configured to follow the command values from the mimics. Press this button again or press the top most button on the Jogbox to stop tracking.

On/Home: These are multi purpose buttons, they represent the state of the corresponding axis.

Off: Motor is plugged but off. Press the button to switch the motor on.

Home: Motor is on but not referenced. Press the button to start referencing the axis. See different methods below.

Homing: Motor is referencing. Only in this state a repeated press on the button switches the motor off.

Ready: Motor is ready to be moved with tracking or playback. A repeated button press initiates a new homing sequence.

Homing Methods with Encoded ARRI Head-2:

If the Encoded ARRI Head-2 is properly connected to the system, the respective glyph will be displayed on top of the Jogbox pages.

The pan axis will find its reference position by means of ARRI Head internal encoders, it might move up to 180 degrees. The limits for pan movement are set to +/- three revolutions.

The tilt axis will go towards tilt zero (horizontal) and perform a small repeated movement around the zero position. The limits for the tilt axis will be read from the ARRI Head electronics.


Homing Methods with ARRI Head-2 (non - encoded):

On the pan axis the current position will become the reference position without any movement of the axis. The limits for pan movement are initially set to +/- 3 revolutions.

The tilt axis will be driven to both mechanical end stops to find the limits for the tilt axis. The reference position will be set in between the two end stops.

2.3 Lens Motors Page

The controls on this page allow to switch on, reference and reverse the direction of the CLM-2 lens motors.

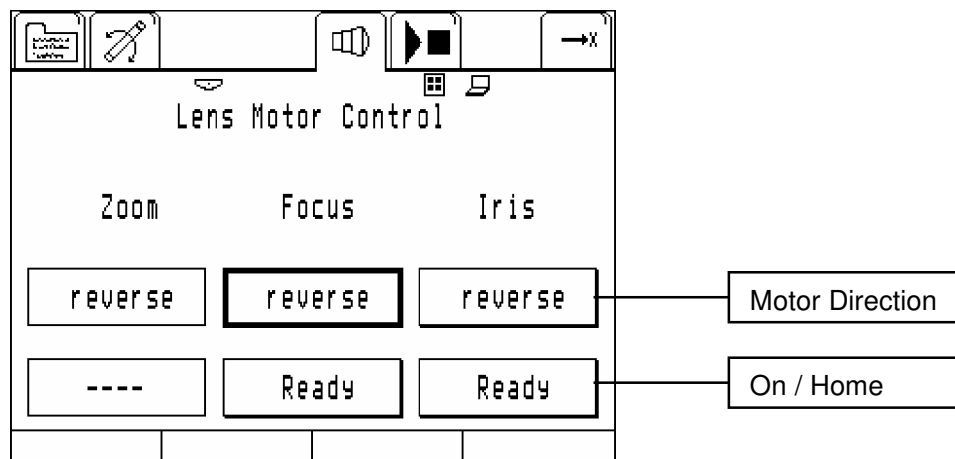

The **On/Home** button acts in the same way as described for pan and tilt axis.


After **reversing** an axis controlled by an absolute mimic (FIU, WZU, WFU) tracking has to be switched off and on again in order to reactivate the reversed axis.

2.4 Play / Record Page

This is the page for camera and play / record management control.

Camera control is completely independent from the motion system and completely up to the user.

The play and record buttons are very similar in their behaviour like simple tape recorders.

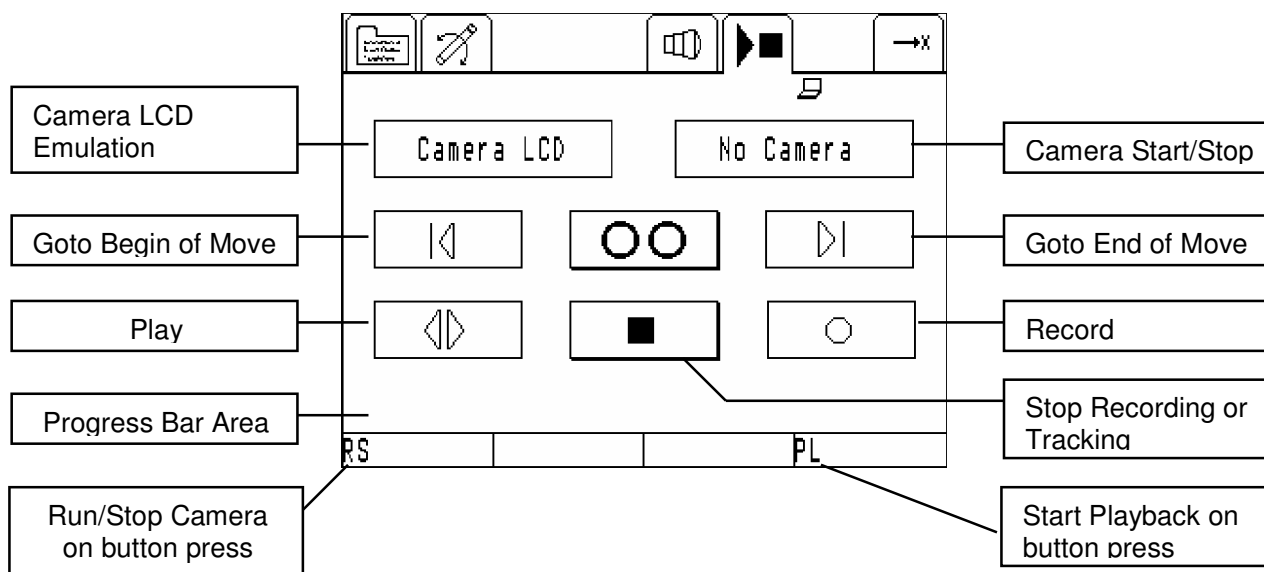

Camera LCD Emulation works on ARRI cameras like operating the camera directly. The camera state (speed, shutter) is not interpreted or modified by the Gears system. Camera start/stop and LCD Emulation does not work on ARRICam ST and LT, in that case speed and shutter are displayed only.

If configured in the System Setup play can be started/stopped by the Jogbox button close to the Secondary Wheel.

During recording or playback the current time within the move is displayed on this button.

Tracking works identical as on the ARRI Head axis page. The system has to be tracking to make the axes follow their commanding mimics. Tracking is a necessary precondition for recording.

Goto Begin and **Goto End** buttons are enabled when there is a recorded move in memory and the system is on standby (not recording / tracking). All axes will go straight and independently to their target position, they will not follow any move path.

Play is enabled when all axes are on either begin or end of the move. If configured in the System Setup play can be started/stopped by the Jogbox button close to the Primary Wheel. If a Bloop Light is connected it will be fired on the first frame of the move.

Stop simply ends the current movement or recording state. Instead of the button on the touch screen the top button on the Jogbox can also be used to stop any movement.

Record starts recording a move. Tracking has to be active to enable the record button. If a Bloop Light is connected it will be fired on the first frame of the newly recorded move.

A **Progress Bar** on the bottom of the screen displays the current progress of recording within the available memory or the progress of playback within the recorded move.


PL: The button next to the Primary Wheel (in the example above the top right button) can be configured to act like the play button on the touch screen (see File – system – setup). This option works only while the Play/Record page is visible and is indicated by the characters PL in the bottom line of the display.

RS: The button next to the Secondary Wheel (in the example above the top left button) can be configured to act like the run camera button on the touch screen (see File – system – setup). This option works only while the Play/Record page is visible and is indicated by the characters RS in the bottom line of the display.

2.5 Contrast / Battery Voltage Page

This page has no specific control elements.


LCD Display contrast can be adjusted by the right upper Jogbox wheel as long as this page is on screen.

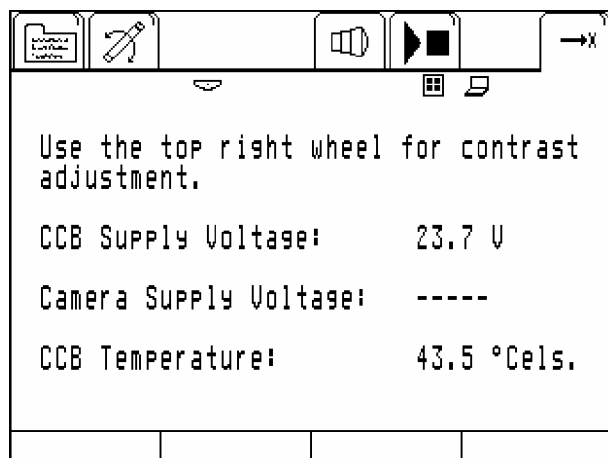

3 System Configuration and Maintenance


3.1 File and System

The subpages of the File page hold functions for loading and saving recorded moves and for the setup of some system wide features, such as battery type and other operation options.

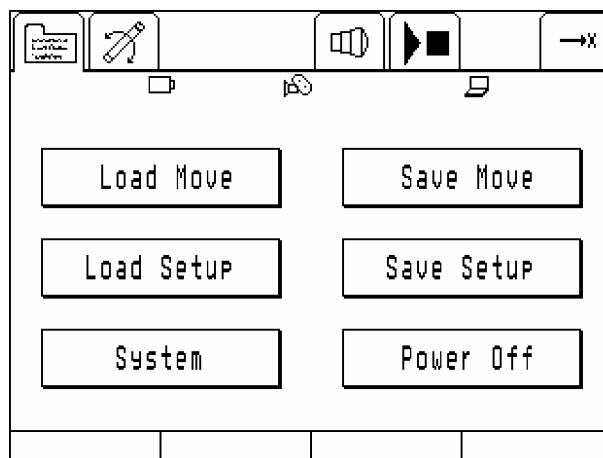

A setup is basically a move without recorded data. Load a prior saved setup to recover any axis specific settings.

The *System* page allows to get rid of your recorded moves, to configure and control the ARRI Head pan and tilt axes.

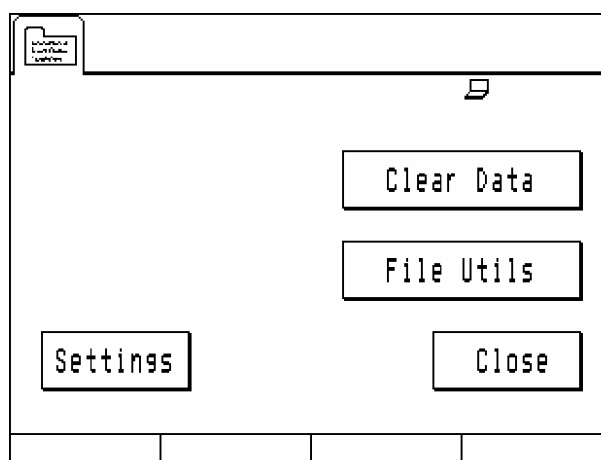


Clear Data: Clears recorded move memory – simply prevents you from playback in Gears.

File Utils: Enables the deletion of recorded files.

Settings: Configuration center for Gears, see paragraphs below.

3.2 System Settings Page

The *System Settings* page holds functions for the setup of some system wide features, such as battery type and other operation options.

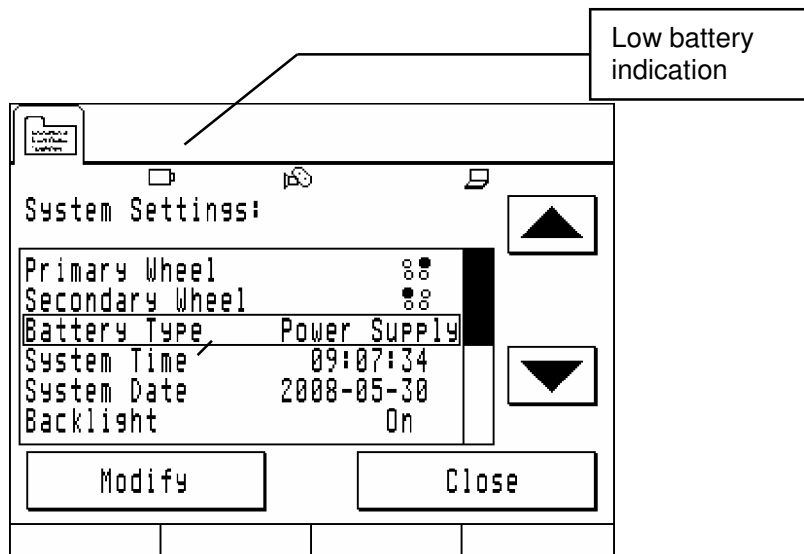


Primary Wheel: The button next to the *Primary Wheel* on the *Jogbox* can be configured to act like the Play button on the Play/Record page. See *Play on Primary Wheel* below to enable this option.

Secondary Wheel: In Gears the button next to the *Secondary Wheel* on the *Jogbox* can be configured to act like the Camera R/S button on the Play/Record page. See *RS on Secondary Wheel* below to enable this option.

Battery Type: Lets you configure different power supply types. If the power supply level is lower than the battery type specific threshold, the system refuses to start play or record. This state is indicated by a flashing battery symbol in the *System State Glyphs*.

Selecting 'Power Supply' as battery type disables all battery checks.

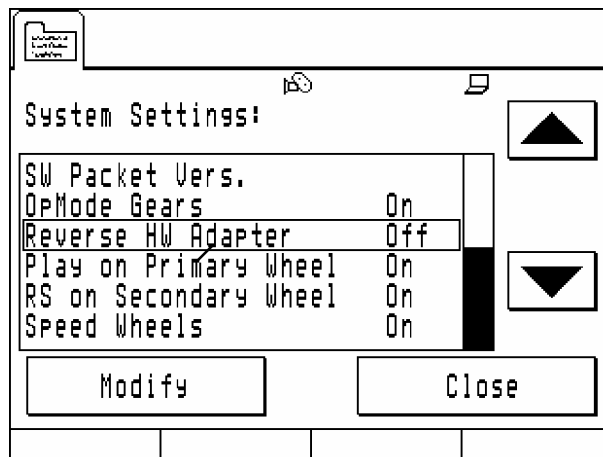

OpMode Gears: If enabled this option lets you choose between *ArriMotion* and *Gears* mode. The selection will be taken into account on the next power up of the system.

Reverse HW Adapter: If the *Handwheel Adapter* shall be operated by two persons (one on the wheels, another one on the *Jogbox*) from opposed sides of the *Handwheel Adapter*, Pan and Tilt handwheels have to change their role which will be accomplished by this option.

Play on Primary Wheel: Enables the button next to the Primary Wheel on the *Jogbox* (configurable only with *ArriMotion*) to act like the play button while the Play/Record Page is visible. See the Play/Record page for the function indication.

RS on Secondary Wheel: Enables the button next to the Secondary Wheel on the *Jogbox* (configurable only with *ArriMotion*) to act like the run/stop button on the camera while the Play/Record Page is visible. See the Play/Record page for the function indication.

Speed Wheels: Forces the handwheels to act as speed command instead of a position command what results mainly in a little different behaviour at limits/end stops where the speed wheels have 'no memory'.

4 Appendices

For easier reference and for illustration some selected pages from the ARRI Motion manual are supplied also as individual pdf - files.

4.1 Prearrangement

For the very first usage of an ARRI Head-2 its position pins have to be changed, please refer to the AM manual 5.1, p 120.

If there is a need for remote power up of the system, a special cable for remote power on can be supplied.

(see file *A1_AH_position_pin.pdf*)

4.2 Safety features

There are different options to stop the system and to cut the power of the driving motors, please refer to the AM manual safety instructions, p. 8.

(see file *A2_safety_features.pdf*)

4.3 System Setup

See AM manual 2.1, page 22 for a summary of system components.

(see file *A3_system_setup_a.pdf*, *A3_system_setup_b.pdf* and *CO_310_2006_06_ARRIMOTION_STANDARD_CONFIGURATION.pdf*)

4.4 Handwheel Adapter JHC-1

For the optional control via handwheel adapter see AM manual 5.10, page 140.

(see file *A4_JHC.pdf*)

4.5 Jogbox JBO-1

For a description of the controlling Jogbox see AM manual 5.9, page 138.

(see file *A5_JBO.pdf*)

5.1. ARRIHEADs



Danger

Whichever ARRIHEAD is used, it should NEVER be operated upside down, as that would damage the head.



Danger

Disconnect the System from the power supply or battery when assembling, disassembling or servicing the equipment.

The ARRIMOTION system can work with a regular ARRIHEAD-1, a regular ARRIHEAD-2 or with an Encoded ARRIHEAD-2.


Exchanging the Position Pin

On the pan and tilt gear boxes of all ARRIHEADs, one screw must be exchanged for a special pin with a hex driver head (use a 2.5 mm hex driver). These special pins come with the CHM-1 motors. Some ARRIHEADs already have pins with slotted heads; those must also be replaced with the pins with the hex driver heads.

Position Pin with
Hex Driver Head



Position Pin with
Slotted Head (replace)

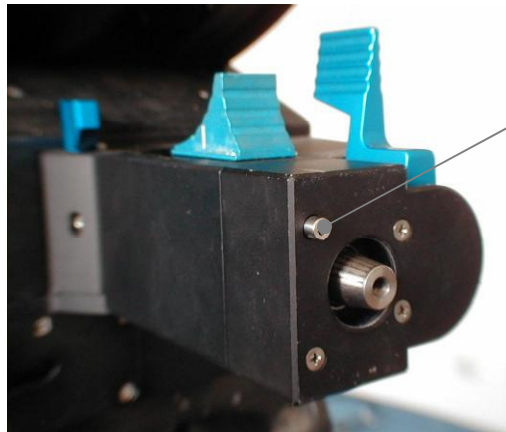

Position Pin
on Tilt Gear Box

Encoded ARRIHEAD-2


The Encoded ARRIHEAD-2 is equipped with position sensors on the main pan gear and on the left rail of the tilt mechanism and there are three sensors for the three locks.

- Encoders in the pan and tilt mechanisms provide higher precision in position detection (=easier and more accurate homing).
- Automatic lock detection

Safety Features

The ARRIMOTION System can be stopped by the following means:

- The STOP button in the Play/Record screen of the Jogbox stops the system's movement.

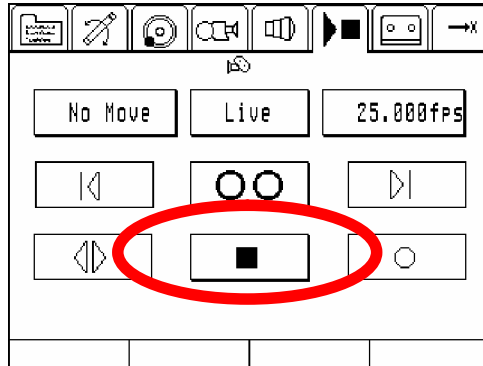

- The silver button above the screen on the Jogbox stops the system's movement. It may take a moment till the motors come to a standstill. This is **not** an emergency stop button.




- The EMERGENCY STOP button on the Camera Control Box (CCB) cuts the power supply to the motors and thus the motors stop instantly.



- Removing power from the system will stop the system.

2.1. Basic Sample Configuration

The basic sample configuration described here includes an ARRIHEAD and the ARRI Lens Control System for focus and zoom.

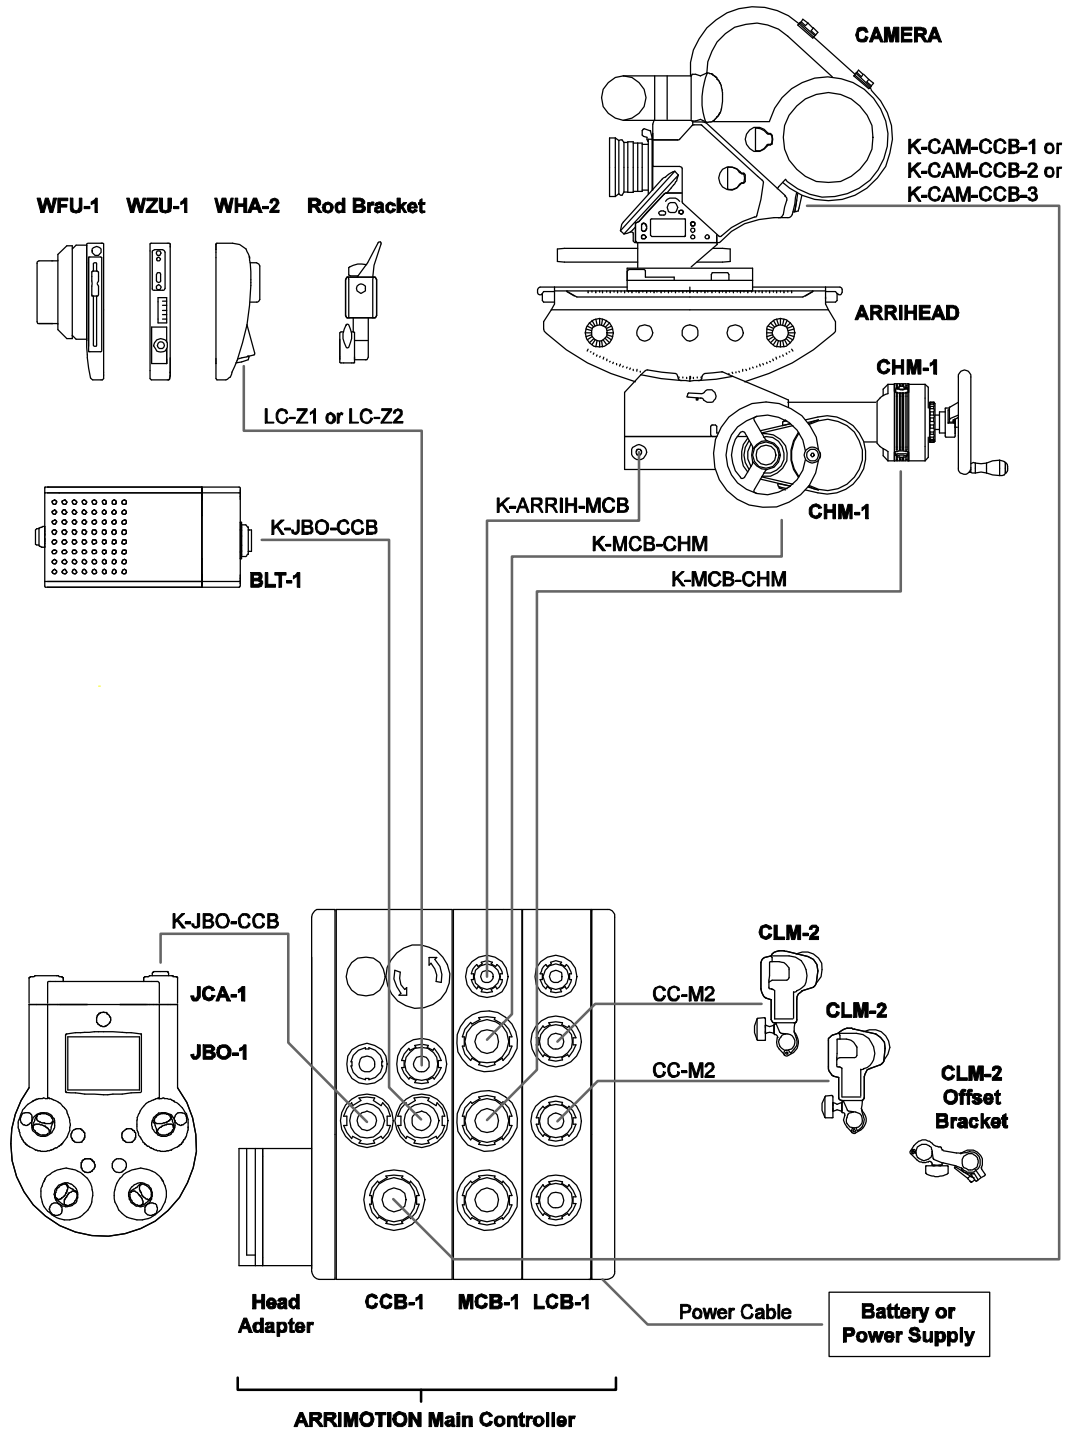

- Connect the connectors on the bottom of the CHM-1 motors to the respective connectors on the MCB-1 with cables K MCB-CHM. The side with the angled connector goes into the CHM-1. If you have more than one MCB-1, use the one closest to the CCB-1.
- Attach the CLM-2 motors to the rods and plug their cables into the respective connectors on the LCB-1. Cables for motors that are attached to the camera left rod should be fed between the lens and the rod, not underneath the rod.
- If you have an Encoded ARRIHEAD-2, use cable K-ARRIH-MCB to connect the connector on the Encoded ARRIHEAD-2 to the ARRIHEAD connector on the MCB-1 closest to the CCB-1.
- If you have a 435 Advanced with an FEM-2 or an ARRICAM, and you are using LDS lenses, you can connect their LDD connector with the LENS DATA connector on the LCB-1 using cable K-LDD-LDS.



The ARRIMOTION system all cabled up!

Motion and Camera Control Input Devices



ARRIHEAD 2



JHC-1
Jogbox
Hand Wheel Controller
K2.52136.0

Common Operating
of Pan and Tilt

Remote Operating
with Hand Wheels
via Monitor Control


Hand Wheel Controller



C20S Fluid
Encoded Head
K2.52256.0

Remote Operating
with Fluid Head
via Monitor Control

Encoded Fluid Head

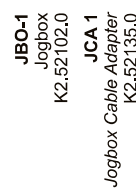

JBO-1
Jogbox
K2.52102.0

Remote Operating

Jog Box



WHA-(2or3)



WZU-(1or3)

Operating Focus,
Zoom and Iris
(also possible with:
ZMU-1/2, FIU-1)

Focus and Zoom Unit



Cable K-JCA-CCB
K2.52252.0 (2m, 6ft)
K2.52152.0 (10m, 33ft)
K2.52253.0 (25m, 83ft)




Cable LC-Z1
K4.41395.0 (3.5m, 12ft)
Cable LC-Z2
K4.41396.0 (7m, 23ft)

Camera Control



ARRIFLEX 435 Xtreme/Advanced + ICS
Speed, Shutter, RUN/STOP

Motion Control

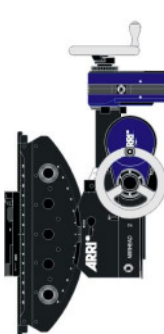

ARRIHEAD 2 Motor CHM-1
Pan and Tilt Axis

Lens Control



CLM-2
Lens Motor
K2.52036.0



Cable CC-M2
Long Cable for CLM-2
K2.52224.0

16SR3 HS or Adv. / 235/ 535B / 435ES
ARRIFLEX 435 Xtreme/Advanced
ARRICAM STUDIO / LITE

Motion Control Boxes



CCB-1
Camera Control Box
K2.52231.0

K-CAM-CCB-3
K2.52221.0

K-CAM-CCB-2
K2.52220.0

K-CAM-CCB-1
K2.52219.0

K-ARRIH-MCB
K2.52216.0

K-MCB CHM
K2.52098.0

CC-M2
K2.52224.0

Pan Axis Motor (CHM-1)
Tilt Axis Motor (CHM-1)



MCB-1
Motor Control Box
K2.52107.0



LCB-1
Lens Control Box
K2.52104.0

Technical Info

Data Storage Capacities
(based on 6 Axes Configuration)

(Focus, Iris, Zoom, Tilt, Pan, Cam Control)

Maximum duration of single take: > 100 min

Max. Capacity on Hard Disk: up to 280 hours

Max. Capacity on Flash Disk: up to 13 hours

GPI-1
General Purpose
Interface
K2.52223.0

BLT-1
Bloop Light
K2.52222.0

5.10. The Jog box Hand Wheel Controller JHC-1

The Jog box Hand Wheel Controller JHC-1 can be used as the central station for controlling the ARRIMOTION system. It can accept two hand wheels from the ARRIHEAD, a video monitor and the Jog box. It must be attached to a flat Mitchell tripod base (this suggests of course that it is easily mounted on a tripod), and can then be rotated freely.

On the right side of the JHC-1 is a connector that can accept a future controller for a roll axis.



JHC-1 Set up

- Attach the JHC-1 to a tripod or other secure surface that has a flat Mitchell base.
- Use cable K-JCA-CCB to connect the connector on the right side of the Jog box Hand Wheel Controller base to the SER1 connector on the CCB-1.
- Attach two ARRIHEAD hand wheels to the drive shafts on the JHC-1 arms.

Attaching the Jog box

- Release the Jog box locking lever by moving it clockwise into the 8 O'clock position. If the Jog box Cable Adapter (JCA-1) is attached, carefully pull it off the Jog box.
- Push the Jog box carefully onto the Jog box Hand Wheel Controller. Make sure that it goes on straight and not at an angle.
- When the Jog box is pushed all the way onto the Jog box Hand Wheel Controller, the locking lever locks automatically. Make sure that it is all the way counter-clockwise in the 6 O'clock position.

Adjusting the Arms

- Lift the arm lock and then position the arm to the most comfortable position.
- Push the arm lock back down to lock the position.

5.9. The Jog box JBO-1

The Jog box JBO-1 or the Laptop must be connected to the ARRIMOTION system to use the system. The Jog box can be either attached to the CCB-1 with a cable, or it can be attached to the Jog box Hand Wheel Controller.



What is a Jog-shuttle?

The Jog box has four unique input devices, called Jog-shuttles. In the center of each Jog-shuttle is a joystick that can be pushed up or down, and around the joystick is a jog wheel that can be rotated. The joystick can change values quickly, whereas the jog wheel allows for precision positioning.

